

# TECHNOMOUSE IQ



## Technomouse IQ functions:

- A. Rolling pin
- B. Scroll wheel
- C. Copy
- D. Paste
- E. Left click
- F. Right-click
- G. Double click with one click
- H. Cursor speed LED



## How to install

Plug your Technomouse IQ into your computer's USB socket. Give your computer a few seconds to automatically install.

## Using the scroll bar

The scroll bar **A** has two functions:

- Press the scroll bar to left-click.
- Move the cursor by moving the scroll bar from side to side and back and forth.



## Adjust the click resistance of the roller bar

Set how hard or soft you need to press the roller bar to click.

Change the click sound setting by holding down both the **E** button and **H** for two seconds, the LEDs will show the current setting. While still holding down the **E** button, release the **H** button and use the scroll wheel **B** to change the click resistance setting. Release **E** to select the setting.

Note: If you want to switch off the click function of the scroll bar, do as above but scroll the scroll wheel until all LEDs are lit.




## Adjusting the click sound

To change the click sound setting, press **F** and hold the button **B** for two seconds, the LEDs will show the current setting. While button **F** is pressed, release button **B** and use scroll wheel **H** to adjust click sound. Release **F** to select the setting.

Note: If you want to switch off the click sound of the scroll bar, do as above but roll the scroll wheel until all LEDs are lit.



## Changing the cursor speed

Press the button  to change the cursor speed. There are ten speeds to choose from, ranging from slow (600 dpi) to fast (2800 dpi). The indicator lights show which speed you have selected.



600 DPI



800 DPI



1000 DPI



1200 DPI



1400 DPI



1600 DPI



1800 DPI



2000 DPI



2400 DPI



2800 DPI



## User settings

The Copy and Paste buttons on your Technomouse IQ can be adjusted for use with Mac operating systems. To switch to Mac mode press and hold **E** and **F** buttons for two seconds. The right-most LED will flash to indicate Technomouse IQ is in Mac mode. Repeating this process will revert back to Windows mode.



## Change the double-click button to

If you want to change **G** the double-click button to act as a centre button, press **H** and **G** hold the buttons for two seconds, until the light flashes. Repeat the button press to return to double button operation.





## Troubleshooting

Make sure that the left and right roller bar holders are in the locked position. Should one or both be unlocked:

1. Slide the roll bar holders to the locked position
2. Reset the Technomouse by:
  - a. Unplugging the USB cable from the computer
  - b. Plugging the cable back into the computer

Check that your cable is not damaged.

Try changing the USB socket on your computer. USB sockets have different frequencies that may affect the connection between your Technomouse and computer.

